



PRO BAG 1



DELSEY



Detachable Film Pouch

Stow away your exposed film in a secure pouch. Simply remove the pouch, keep the film together, and dispatch for processing.
Pro Bags 1,2 & 3.

Padded Shoulder Strap

A 2" wide shoulder strap completely around the bag with a padded skid proof ergonomic shoulder pad ensures comfort and protection. *All PRO Bags.*



Removable Lens / Accessory Holders

Modular compartments provide flexibility to suit your system.
PRO Bags 1,2, 3, & 4.



Large Side Pockets

Room enough to hold, protect and organize.
PRO Bags 1,2, 3, & 4.




PRO Bag 1

Customizable interior with room for: Professional SLR &/or Medium Format camera systems, lenses & gear, Pro Flash, Light Meter & many more accessories & zippered top mesh pocket.

Features:

- Front Organizer Section
- Two Side Pockets
- Detachable Film Pouch
- Hide-a-way handles
- Tripod carry system
- Padded shoulder strap
- Padlock
- Airline carry-on

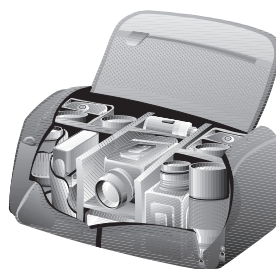

Dimensions		cm
Internal	Length	48
	Height	25
	Depth	29
External	Length	57
	Height	29
	Depth	34

Weight	gr
	3,710

Colour	Order Code
Black	DELPROBAG1

Airline carry-on size regulations do change. Please check with your carrier before departure.